AT&T U-verse Advanced series A10 Remote Control

Quick User Guide

at&t

1. How to connect the Base Station

STEP 1. Determine where you would like to place the Base Station.

STEP 2A. If the location is less than 3 feet from the U-verse receiver, connect the "square" end of the supplied USB cable to the Base Station and the "rectangle" end to the back of the U-verse receiver.

STEP 2B. If the location is more than 3 feet from the U-verse receiver, connect one end of the supplied plug-in power supply to the Base Station and the other end to a near by wall socket.

2. How to set the clock

STEP 1. Use the +H and the +M buttons on the bottom of the Base Station to set the hours and minutes of the clock.

STEP 2. With the remote control in the Base Sta--tion, press and hold the find button which will cause the clock to dim as desired. Press and hold find button again to make clock brighter as desired.

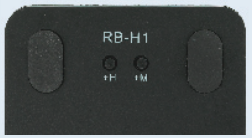

3. How to charge the remote control

STEP 1. Place the remote control in the Base Station.

STEP 2. Make sure that the charging points are in full contact by seeing the charging lights move.

NOTE: It is not necessary to charge the remote control often, but remember to place it in the Base Station at least one overnight session per month if possible. Quick charge the remote in 30 minutes or fully charge the remote in 12 hours.

4. How to manually program the remote

STEP 1. Power on the device you want to program

STEP 2. Locate the 4-digit code from the provided code list.

STEP 3. Press and hold the mode key (TV, DVD, or AUX) and while holding the mode key, press the ok key.

STEP 4. Release both the mode key and the OK key. All the mode keys flash but the selected mode key stays on.

STEP 5. Enter the 4-digit code from the code list. The selected mode key light blinks for each digit entry and remains off after the entry of the fourth digit

STEP 6. Point the remote control at the selected device and press the power key once. The device should turn off if you have found the correct 4-digit code.

STEP 7. If there are multiple codes and one does not work, repeat steps 1-5 using the next code until you find the correct one. If it still does not work as intended, please refer to your users manual.

Save your codes.

TV_____ **DVD**_____ **AUX**_____

5. How to use the Find Feature

STEP 1. If you have misplaced the remote control, simply press the AT&T globe on the Base Station (the remote control will flash several keys and play a ring tone)

STEP 2. Once you have located the remote control, press any button to stop the sound and flashing keys.